

# USER MANUAL



## POPCORN MACHINE CART

MODEL: 09506007

READ THIS MANUAL CAREFULLY BEFORE USING



# 1. PREFACE

## 1.1 Introduction

Thank you for purchasing this product from Maxima. To ensure your own safety and to get the best out of your purchase, please read the instructions carefully before attempting to install or use this product. This manual should be available at all times and stored near the appliance.

All Maxima products are CE certified. Our products meet the legal requirements regarding health, safety and the environment, as set out by the European Commission. In addition, all products are thoroughly tested prior to shipment to ensure product quality and safety.

## 1.2 General information

For after sales support, please visit our Customer Service page at: [www.maxima.com/en/service](http://www.maxima.com/en/service). User manuals are available online and can be downloaded electronically from the product's page on our website. If the manual for your product is not available, please contact Customer Service. For more information, visit our website: [www.maxima.com](http://www.maxima.com)

## 1.3 Warranty

We offer a 12-month warranty from the date of purchase, as indicated on your purchase invoice. Under the warranty, we will deliver additional spare parts in case of: material defects, manufacturing defects or other quality issues.

The following is not covered by the warranty:

- Damage relating to the incorrect use of the product
- Damage relating to use of parts that were not part of the original machine
- Damage due to transport to another location after delivery, or incorrect installation and connection
- Component damage caused by incorrect electrical or water connection
- Damage as a result of disassembly and/or modification to the original machine without permission
- Damage as a result of misuse, poor cleaning or improper maintenance
- Damage as a result of fire, building collapse, lightning, flooding, power surges or vermin
- Failure to read or follow the user manual
- Consumables and parts prone to wear and tear
- An altered invoice or no invoice

## 2. PRODUCT INFORMATION

### 2.1 Intended Use

This appliance may only be used for the purpose for which it was designed and intended. The manufacturer and supplier are not liable for any damage caused by incorrect operation and improper use.

This is a commercial product that must only be used by a trained professional who has read and understands this manual. It must not be used by children or persons with reduced capabilities without supervision.


### 2.2 Product Description

Popcorn machine cart is one equipemnt which helps popcorn machine body locating and moving. It has the features of easy operation and practicality, it can also being torn down when packing.


## 3. OPERATION

### 3.1 Assembly

- Overturn the cart body, and fit the short leg to the body.
- Fit the wheel to axes, then fasten to the short leg.
- Fit the moving wheel to long leg, then fasten to cart body.
- Overturn the cart body back normal, then fit the handle.
- Add the platform at last.

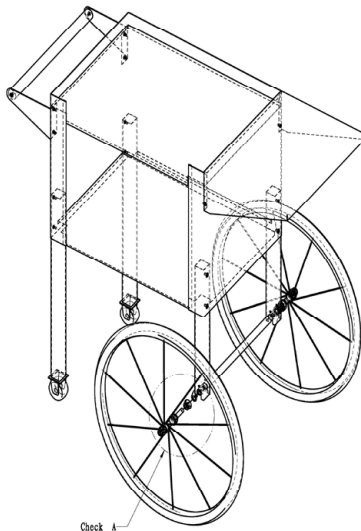

Please assemble the cart as follow steps.

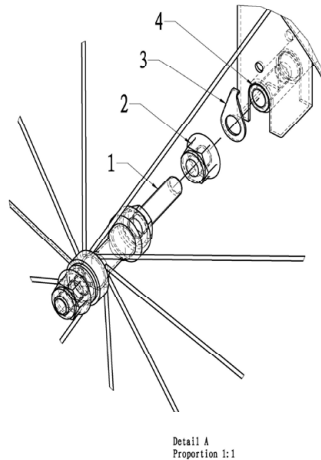

### 3.2 Operation

Put the popcorn machine on the cart, then you can move the cart anywhere you want, when the cart stop moving, press down the brake on the moving wheel with feet, this is help the cart stand steady. When you want to move the cart, just loose the brake is ok.

### 3.3 Cleaning and Maintenance

- Clean the cart every some time with water and detergent.
- Add some lube such as butter to cart axes and parts of moving when when it can't move easily.





## **TECHNICAL DEPARTMENT & WAREHOUSE**

NIJVERHEIDSWEG 23A/D - 3641 RP MIJDRECHT - THE NETHERLANDS

☎ +31 (0) 297 253 969

✉ [TECHNICAL@MAXIMA.COM](mailto:TECHNICAL@MAXIMA.COM)